

- Damper can be installed with blade in horizontal position.



- Damper can be installed with mechanism on either side of the wall
- Please consult with the fire batt manufacturer for appropriate sealant/

- Guidelines acc. to DW144/145 (not required for CE):
 - Installation lugs as shown in the drawings are available upon
 - Provide appropriate break-away / flexible joint between fire damper and connecting ductwork on both sides of the assembly (DW145: eg socket & spigot or flanged with appropriate fixings eg plastic cleats, clips, clamps, bolts, aluminium alloy rivets etc.).
 - Provide a panel in the adjacent ductwork to allow access to the internal components of the fire damper. Rf-T can provide an inspection opening on the damper body upon request (option UL).
 - Ductwork must be independently supported and installed

INSPECTION AND HANDOVER CHECK LIST



SK C€



